


YOUR DATA, ANYWHERE, ANYTIME



LogTag®

UTREL30-WiFi
30 Day WiFi Dual-Channel
Low Temperature Logger

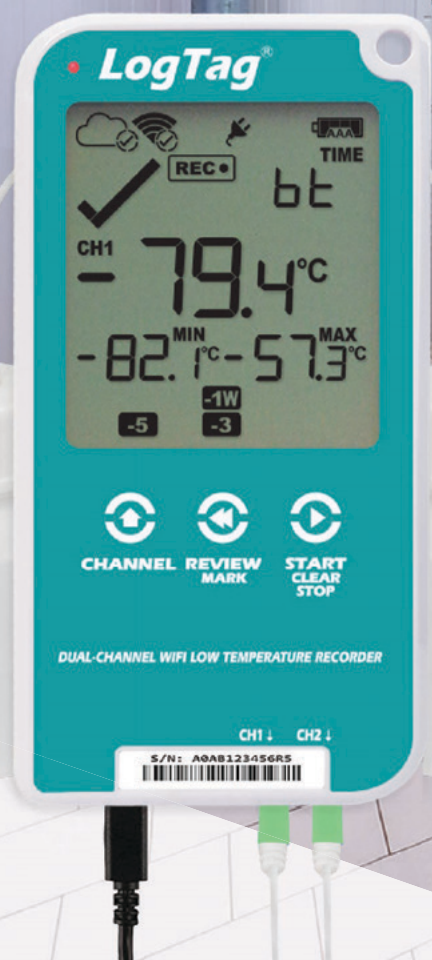


The LogTag® UTREL30-WiFi temperature data logger automatically uploads real-time temperature data to your LogTag® Online cloud account via your existing wireless network.


It features a large, easy-to-read display, along with many familiar attributes known from the LogTag® family of data loggers.

These include non-volatile memory that holds up to 32,000 temperature readings, or 16,000 readings per channel. A statistical memory storing maximum and minimum readings and alarm durations for each of the last 30 days.


Accessories

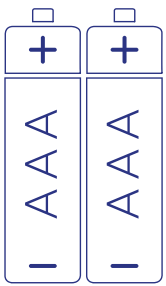


2x AAA Batteries
Not Included

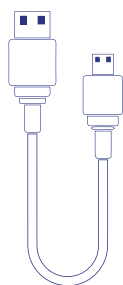


USB Cable
Included

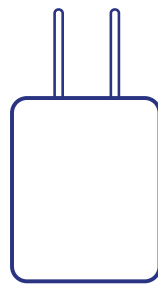

AC Adapter[^]
Included

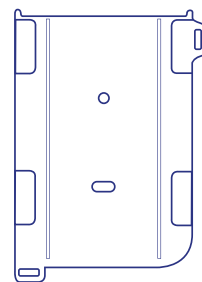

Wall Mount
Not Included

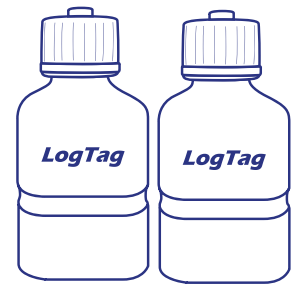

Buffer assembly
Not Included
(Silica sand recommended for temperatures below -40°C)



Socket Cover*
Included (Optional to use)



External Probe
Not Included (Required).

Compatible probes below:

ST10S	22mm tip length, ø5mm (Not recommended for use with buffer)
ST10M	65mm tip length, ø5mm.
STX50	5 Meter extension cable for ST10/ST100 sensors.

*ST10S Probes are available with a 0.5m, 1.5m or 3m cable
ST10M Probes are available with a 1.5m or 3m cable
E.g. ST10M-15 for 1.5m or ST10M-30 for 3m cable*

[^]US and EU adapter only

Features



Real-time data automatically uploaded via WiFi to the LogTag Online cloud.




Download data via LogTag Analyzer or as a PDF (no software required) when Wi-Fi is unavailable.



Configure Wi-Fi settings using LogTag Mobile application and Bluetooth®.



Check and reset Min-Max temperature reading at any time.

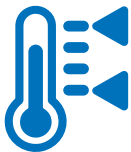

Read current temperature and latest Min-Max temperature at a glance.




View alarm status for up to 30 days at a glance.



Audible alarm and flashing red LED signals a temperature alarm.



Measure and store up to 16,000 readings for each channel – enough for 67 days at 6 minute logging.



Can be powered by 2x AAA batteries (user replaceable) if external power is lost.



Second battery backup via a coin cell to ensure no data is lost.



Auto-pause function suspends alarm & statistic processing when the external probe is unplugged.



Two socket external probe with auto channel swap function.

Applications



Vaccine & Pharmaceuticals



Industrial



Cold Storage



Clinic



Transportation



Refrigerated Containers

Specifications

Product Model	UTREL30-WiFi.
Sensor Measurement Range	-90°C to +40°C (-130°F to +104°F).
Operating Temperature Range	-30°C to +60°C (-22°F to +140°F).
Storage Temperature Range	10°C to +40°C (32°F to +104°F).
Rated Temperature Reading Resolution	0.1°C (0.2°F) for measurements -80°C to 10°C (-112°F to 50°F) 0.2°C (0.4°F) for measurements 10°C to 20°C (50°F to 68°F) and -90°C to -80°C (-130°F to -112°F) 0.3°C (0.5°F) for measurements 20°C to 30°C (68°F to 86°F) 0.5°C (0.9°F) for measurements 30°C to 40°C (86°F to 104°F) LogTag Analyzer currently displays to one decimal place of °C or °F. The native resolution is what is stored in the LogTag®.
Rated Temperature Reading Accuracy	Better than ±0.5°C for -20°C to +10°C (-4°F to 50°F) Better than ±0.7°C for -50°C to -20°C (-58°F to -4°F) and +10°C to +30°C (50°F to 86°F) Better than ±1°C for -80°C to -50°C (-112°F to -58°F) and +30°C to +40°C (86°F to 104°F) Better than ±1.8°C for -90°C to -80°C (-130°F to -112°F)
Probe Connectivity	Up to 2
Probe Compatibility	All ST100 precision thermistor external probes can be interchangeably connected to the UTREL30-WiFi. Please refer to the page for External Probes on the LogTag North America website.
Recording Capacity	16,129 temperature readings. 67 days at 6 minute logging. Day summary statistics memory (for display on LCD): up to 30 days of Min/Max/duration and alarm trigger statistics.
Sensor Reaction Time	Typically less than 2 minutes(T90) in moving air (1m/s) for ST10S type.
Sampling Interval	Configurable from 30 seconds to 18 hours.
Logging Start Options	Push button start (with configurable start delay from 1 minute to 72 hours) or specific date & time.
Download Time	Typically with full memory (16,129 readings) in less than 10 seconds.
Environmental	IP51 (when vertically mounted or hung with USB dust-cap in place).
Calibration	Factory calibrated using NIST equivalent reference equipment. Calibration certificate available on request.
Power Source	5V via micro USB socket or, 2 x 1.5V AAA batteries. CR2032 LiMnO ₂ coin cell (backup logging function only).
Battery Life	Device should normally be powered via USB. AAA batteries provide backup power for up to 2 months.
Connection Interface	USB 2.0 / Micro-USB plug.
WiFi	802.11 b/g/n
WiFi Authentication Methods	Open, WPA2/PSK (with or without PMF), EAP-PEAP, EAP-TTLS
Bluetooth®	Bluetooth® V4.2 BR/EDR and Bluetooth LE®
Size	141mm(H) x 72mm(W) x 18mm(T).
Weight	158g with AAA batteries, (134g - excluding probe and AAA batteries).
Case Material	Polycarbonate

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LogTag North America Inc. is under license. Other trademarks and trade names are those of their respective owners.




Connection Software

Real-time data automatically uploaded via WiFi to the LogTag Online cloud.

For more information on LogTag Online, please visit our website:

logtagrecorders.com/online

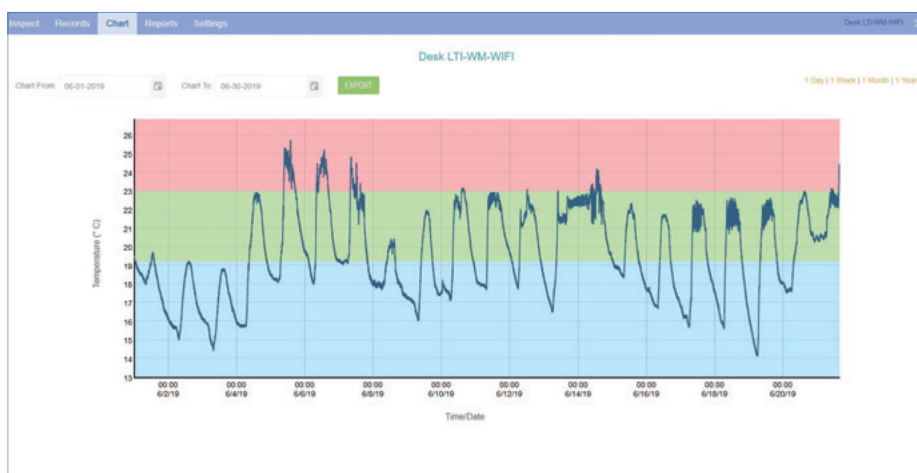

Revision K (080323) © Copyright 2023, LogTag North America Inc. All rights reserved.

LogTag® is a registered trademark of LogTag North America Inc. LogTag North America Inc. reserves the right to change this specification without notice.